

AVRISP mkII in ISP mode with ATmega8515

Main

Program

Fuses

LockBits

Advanced

HW Settings

HW Info

Auto

Fuse	Value
S8515C	<input type="checkbox"/>
WDTON	<input checked="" type="checkbox"/>
SPIEN	<input checked="" type="checkbox"/>
EESAVE	<input type="checkbox"/>
BOOTSZ	Boot Flashsize=128 words Boot address=\$0F80
BOOTRST	<input type="checkbox"/>
CKOPT	<input checked="" type="checkbox"/>
BODLEVEL	Brown-out detection at VCC=2.7 V
BODEN	<input type="checkbox"/>
SUT_CKSEL	Ext. Crystal/Resonator High Freq.; Start-up time: 16K CK + 64 ms

HIGH	0x8F
LOW	0xFF

☒ Auto read  
☒ Smart warnings  
☒ Verify after programming

Program

Verify

Read

Setting mode and device parameters.. OK!

Entering programming mode.. OK!

Reading fuses address 0 to 1.. 0xFF, 0x8F .. OK!

Leaving programming mode.. OK!